


Measuring Your Shower

To provide accurate measurements:

- Stand **INSIDE** the shower cubicle.
- Place your tape measure in the middle back corner.*
- Measure from the corner to the inside of the framework on each side (A & B on diagram).
- Ensure you advise the shower shape (square, triangle, curved).

By providing accurate measurements, you will ensure the correct Showerdome® is supplied.

13 Shapes and Sizes

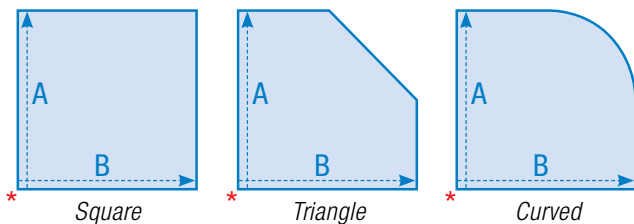

**shower
dome®**



For a drier, warmer, healthier home, insist on Showerdome®

email: info@showerdome.co.nz
ph: 09 835 9797 / www.showerdome.co.nz